

OPERATING INSTRUCTIONS (CONT.)

Clearing a Jam

1. After removing tube from nozzle, open chamber guard, then turn the power switch off. (Fig. I)



(Fig. I)

2. Use the supplied clearing rod and nozzle brush to remove all tobacco residue from tobacco chamber (Fig. J)



(Fig. J)

3. Turn the power switch on and close the chamber guard. (Fig. K)



(Fig. K)

4. Keeping fingers and hands AWAY FROM NOZZLE OPENING, press and release the chamber guard to activate injector and ensure successful removal of jam (Fig. L)



(Fig. L)

The machine is now ready to use

MAINTENANCE, CARE & HANDLING

- Keep cigarette machine out of the reach of children.
- Clean tobacco chamber and nozzle after every use.
- Clean your machine regularly by removing tobacco residue from tobacco chamber with the supplied clearing rod and nozzle brush.
- Do not immerse machine in water.
- To prevent jamming of the device, avoid the following types of tobacco:
 - Overly moist tobacco (such as pipe tobacco)
 - Overly dry tobacco
 - Very fine cut tobacco



- Do not take machine apart!
- Use the adaptor included.
- Do not overfill the tobacco chamber! Doing so will cause the machine to jam.
- Always keep hands/fingers away from nozzle opening and tobacco chamber when pressing the «start» button to avoid cuts and lacerations.
- Extended injector is very sharp!

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

POWEROLL™

BY OCB.



ELECTRIC CIGARETTE MACHINE OWNER'S MANUAL

more on www.ocb.net

SAFETY INSTRUCTIONS

Read all instructions before using :

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

The appliance is only to be used with the power supply unit provided with the appliance.

READ BEFORE OPERATING YOUR POWEROLL™ CIGARETTE MACHINE

Thank you and congratulations on your purchase of the POWEROLL™ electric cigarette machine

The new POWEROLL™ electric cigarette machine «one-touch operation» makes it extremely easy to use. The chamber guard is an added safety feature and tools are included for cleaning to keep your POWEROLL™ running smoothly.

Please carefully read the instructions first before operating your machine! Following the simple maintenance requirements will keep your machine in optimum working order for years to come.


GETTING TO KNOW YOUR NEW POWEROLL™ CIGARETTE MACHINE




OPERATING INSTRUCTIONS

video on www.ocb.net

1. Plug in machine and turn the power switch on. (Fig. A)

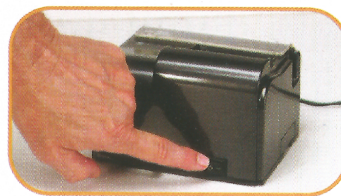


(Fig. A)

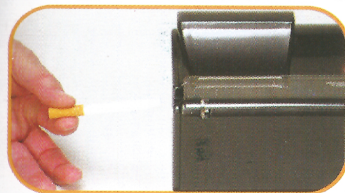


(Fig. B)

2. Slide the open end of a cigarette tube onto nozzle. (Fig. B)

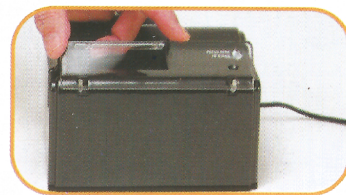

(Fig. C)

3. Open chamber guard. (Fig. C)

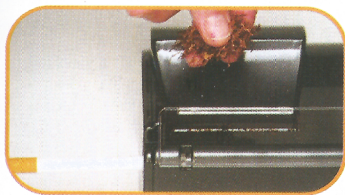


(Fig. D)


4. Filling the corners first, deposit tobacco evenly in the tobacco chamber. Do Not Overfill. (Fig. D)

OPERATING INSTRUCTIONS (CONT.)

5. Use tamper to pack tobacco down evenly. (Fig. E)

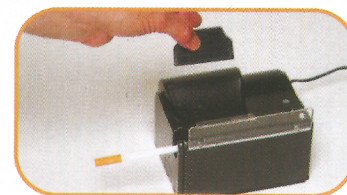


(Fig. E)

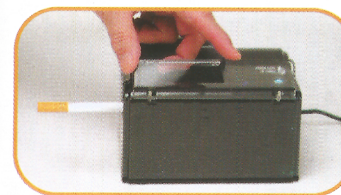

(Fig. F)


6. Clear top of machine of loose tobacco then close chamber guard. (Fig. F)

7. Press AND release chamber guard over start button (as indicated) to activate injector. (Fig. G)

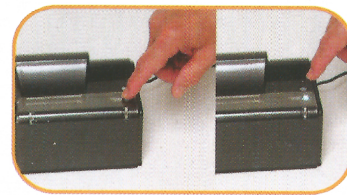

(Fig. G)

Turn off unit when not in use.

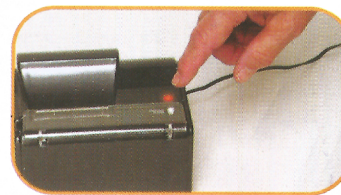

(Fig. H)

CAUTION

In the event of a jam, the machine will reset itself to the starting position and the jam indicator light will flash. (Fig. H)
To clear the jam follow these steps: